HIZERO®

Cleaning Program for your HIZERO - Daily & Weekly

1 DAILY - after use, empty hard waste tray, picture below, and empty waste-water bottle. Both can be rinsed with fresh water, also remove and wash the green filter.





NEVER add any non-approved chemicals to the clean water tank. NO eucalyptus oil, no disinfectant, no other floor cleaning detergents ONLY HIZERO DETERGENT can be used or plain water. (warm or cold)

Clean the brush roller itself at least once per week, clean BEHIND the brush roller once per week, use a paper towel. Long hair will accumulate here.



(3) Clean behind the polymer cleaning roller at least twice a week, by wiping the sink/drain (metal grate) with a paper towel. (very important) Hair, dirt etc will accumulate here.




Clean and wash the WASTE water bottle and lid at least once per week.

Pull apart the lid filter piece and wash with clean water. Also clean the holes.





Once a week, you will need to remove the sink drain (metal grate) which sits behind the cleaning roller. Remove the green top filter, tip the appliance onto its side, remove the cleaning roller, (polymer roller) use the brush handle to push out the sink drain, wash it & reinstall.

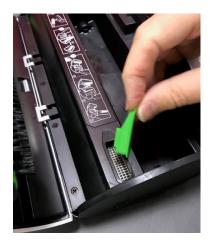





Once you have removed the sink drain (metal grate), clean inside the channel, pictured on the LEFT, with a paper towel. When reinstalling the sink drain make sure that it is reinstalled the correct way. The "high side" or "lip side" of the sink drain should face the opening with the cleaning roller motor at the low side. See image 2 & 3 below:







If you require assistance please call us on **1800 662 301** or look up our how to videos on our help page on **hizero.com.au**, or use live chat on our website.