HIZERO®

Cleaning Program for your HIZERO - Daily & Weekly

1 DAILY - after use, empty hard waste tray, picture below, and empty waste-water bottle.









NEVER add any **non-approved additives** to the clean water tank. **NO eucalyptus oil**, adding any non-official detergent will void your warranty.

(2) Clean the brush roller itself at least once per week, clean BEHIND the brush roller once per week, use a paper towel.

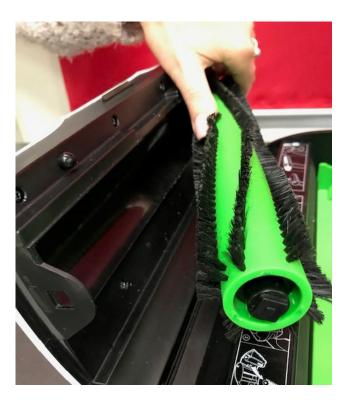



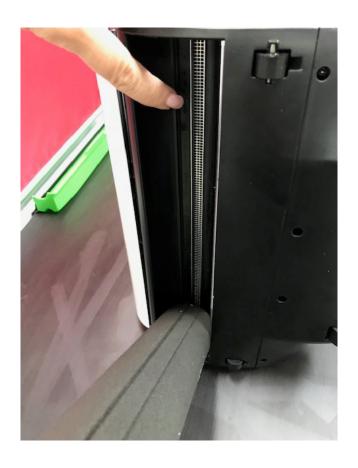

Clean and wash the WASTE water bottle and lid at least once per week Pull apart the lid filter piece and wash with clean water. See below:





Once per week, (if you have pets) Once every two weeks no pets, you will need to remove the sink drain which sits behind the cleaning roller. See below

Use the metal hook provided (with the instruction booklet) to pull out the sink drain piece.

Tip the appliance onto its side, remove the cleaning roller, use the hook and pull out the sink drain, wash it and before reinstalling clean inside the water channel, see below:





6 Once you have removed the sink drain chrome grate, clean inside the channel, pictured on the LEFT, with a paper towel. When reinstalling the sink drain make sure the foam filter is in place, see image on the right. The sink drain can only fit in one way, the lip side of the drain must face the opening.



